

Canon Cameras

EOS 1Dx	EOS 1D Mark II (N)	EOS 1D Mark III	EOS 1D Mark IV	EOS 5D	EOS 5D Mark III	EOS 5D Mark II	EOS 6D	EOS 7D	EOS 7D Mark II	EOS 10D	EOS 20D	EOS 30D	EOS 40D	EOS 50D	EOS 60D	EOS 70D	EOS 100D	EOS 300D (Rebel X)	EOS 350D (Rebel XT)	EOS 400D (Rebel XTi)	EOS 450D (Rebel XSi)	EOS 500D (Rebel T1i)	EOS 550D (Rebel T2i)	EOS 600D (Rebel T3i)	EOS 650D (Rebel T4i)	EOS 700D (Rebel T5i)	EOS 1000D (Rebel XS)	EOS 1100D (Rebel T)	EOS 1200D (Rebel T5 / X70)	PowerShot G7 / G9 / G10	PowerShot G11	PowerShot S5 IS	PowerShot SX1 IS	PowerShot SX10 IS	PowerShot SX20 IS	PowerShot G1X	EOS M
---------	--------------------	-----------------	----------------	--------	-----------------	----------------	--------	--------	----------------	---------	---------	---------	---------	---------	---------	---------	----------	--------------------	---------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	----------------------	---------------------	----------------------------	-------------------------	---------------	-----------------	------------------	-------------------	-------------------	---------------	-------

Nissin Model

MG8000 Extreme	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	
MF18	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	
Di866 Mark II	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
Di866	○	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	○	○	○	
Di700	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	
Di700 A	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	
Air 1 Commander	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	
Di600	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	
Di622 Mark II	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○
Di622	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
i40	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○
Di466	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○
Di28	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○

- Compatible Model
- Latest Firmware is required
- Hi-Speed is not supported
- Hi-Speed & 2nd Curtain not supported
- Wireless TTL Slave is not supported
- Air 1 Use mode 2 (Press mode button + Power on switch), Pilot LED blinking.

Nikon Cameras

	D2Xs	D3 / D3X	D3s	D4	D4s	D40 / D40X	D50	D60	D70 / D70s	D80	D90	D200	D300	D300s	D600	D610	D700	D750	D800	D800E	D810	D3000	D3100	D3200	D3300	D5000	D5100	D5200	D5300	D7000	D7100	Df	Coolpix A	Coolpix P5000	Coolpix P5100	Coolpix P7700
--	------	----------	-----	----	-----	------------	-----	-----	------------	-----	-----	------	------	-------	------	------	------	------	------	-------	------	-------	-------	-------	-------	-------	-------	-------	-------	-------	-------	----	-----------	---------------	---------------	---------------

Nissin Model

MG8000 Extreme	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○
MF18	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○
Di866 Mark II	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○
Di866	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○
Di700	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	
Di700 A	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○		
Air 1 Commander	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○		
Di600	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○		
Di622 Mark II	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○		
Di622	○	●	○	○	○	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	
i40	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○		
Di466	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	
Di28	●	●	○	○	○	●	●	●	●	●	●	●	●	●	●	●	●	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	○	

- Compatible Model
- Latest Firmware is Required
- FV Lock system does not work
- SD Mode not supported

Sony Cameras

Alpha 7	Alpha 7R	Alpha 7S	Alpha 100	Alpha 200	Alpha 230	Alpha 290	Alpha 300	Alpha 330	Alpha 350	Alpha 380	Alpha 390	Alpha 450	Alpha 500	Alpha 550	Alpha 560	Alpha 580	Alpha 700	Alpha 850	Alpha 900	Alpha 3000	Alpha 6000	Alpha SLT A33	Alpha SLT A55V	Alpha SLT A57	Alpha SLT A58	Alpha SLT A65	Alpha SLT A77	Alpha SLT A77 II	Alpha SLT A99	NEX-6	NEX-7	RX1	RX10	RX100 II	HX60V
---------	----------	----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	-----------	------------	------------	---------------	----------------	---------------	---------------	---------------	---------------	------------------	---------------	-------	-------	-----	------	----------	-------

Nissin Model	Alpha 7	Alpha 7R	Alpha 7S	Alpha 100	Alpha 200	Alpha 230	Alpha 290	Alpha 300	Alpha 330	Alpha 350	Alpha 380	Alpha 390	Alpha 450	Alpha 500	Alpha 550	Alpha 560	Alpha 580	Alpha 700	Alpha 850	Alpha 900	Alpha 3000	Alpha 6000	Alpha SLT A33	Alpha SLT A55V	Alpha SLT A57	Alpha SLT A58	Alpha SLT A65	Alpha SLT A77	Alpha SLT A77 II	Alpha SLT A99	NEX-6	NEX-7	RX1	RX10	RX100 II	HX60V
Di866 Mark II	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	○	○	○	○	○	
Di622 Mark II	○	○	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	○	●	●	●	●	○	○	○	○	○	
i40	●	●	●	●	●	●	○	●	●	●	○	●	●	●	○	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	

- Compatible Model
- Firmware update is required
- Firmware update is required + Use the Sony Shoe Adaptor (ADP-MAA)
- Use the Sony Shoe Adaptor (ADP-AMA)

Olympus Micro Four Thirds / Four Thirds Cameras

	E-M1 (OMD)																									
	E-M5 (OMD)																									
	E-M10 (OMD)																									
	E-P1																									
	E-P2																									
	E-P3																									
	E-P5																									
	E-PL1																									
	E-PL2																									
	E-PL3																									
	E-PL5																									
	E-PL6																									
	E-PM1																									
	E-PM2																									
	E-30																									
	E-410																									
	E-500																									
	E-520																									
	E-620																									

Nissin Model																											
i40 (Four Thirds)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Di466 (Four Thirds)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●

Panasonic Micro Four Thirds Cameras

	Lumix GX1																									
	Lumix GX7																									
	Lumix GH-1																									
	Lumix GH-2																									
	Lumix GH-3																									
	Lumix G-1																									
	Lumix G-2																									
	Lumix G-3																									
	Lumix G-5																									
	Lumix DMC-G6																									
	Lumix G-10																									
	Lumix GF-1																									
	Lumix GF-2																									
	Lumix DMC LX3																									
	Lumix DMC LX5																									
	Lumix DMC LX7																									
	Lumix FZ-200																									

Nissin Model																											
i40 (Four Thirds)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●
Di466 (Four Thirds)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●

● Compatible Model

Fujifilm Cameras

	X-T1 / X-T1 GS	X-Pro1	X-E2	X-E1	X-M1	X-A1	X-100T	X-100S	X-100	X-30	X-20	X-10	X-S1	HS50EXR	HS30EXR	HS20EXR	
--	----------------	--------	------	------	------	------	--------	--------	-------	------	------	------	------	---------	---------	---------	--

Nissin Model

i40 (Fujifilm)	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	●	
----------------	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	---	--

● Compatible Model